


# cubiemod

## Cut Template & Instruction

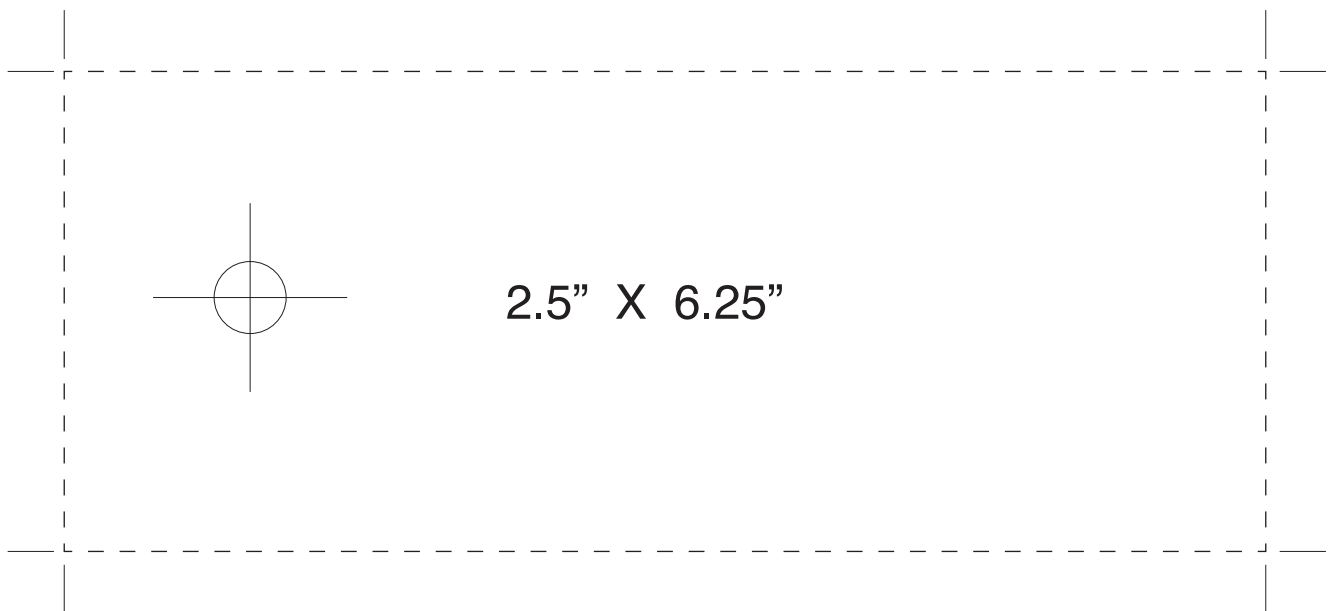

1. Position template on furniture surface in desired position.
2. Tape template to surface.
3. Using a 3/8" drill bit, drill hole on center target provided.
4. Using a jig saw, cut opening following the inside of the line.
5. Corners must be square, sand corners if necessary.
5. Place CubieMod in opening and use provided hardware to install.